

Q

Search UniFi products

Intercoms

>


Intercom Viewer

Datasheet

In The Box

Marketing Images

Installation Guide

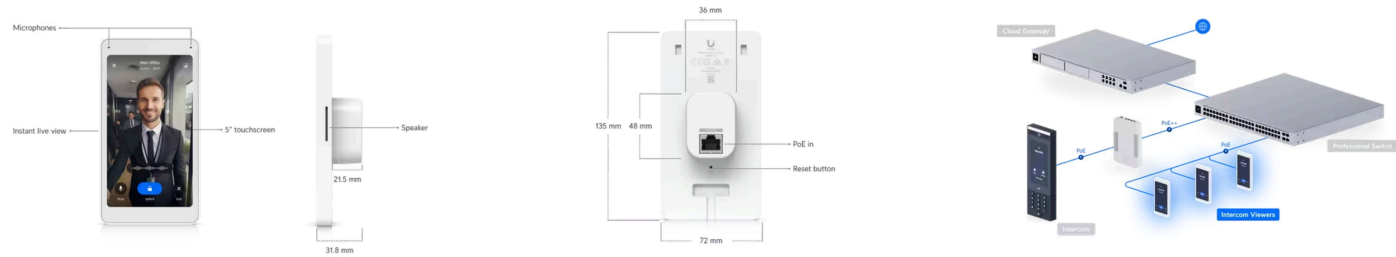

^

Overview

Dimensions	135 x 185 x 32 mm (5.3 x 7.3 x 1.3")
Mobile Unlock	✓
NDAA Compliant	✓
UL 294 Level	Destructive attack: Level I Line security: Level I Endurance: Level I Standby power: Level I

^


Mechanical

Weight	168 g (5.9 oz)
Enclosure Material	Glass, polycarbonate
Mount Material	Aluminum alloy

Mounting	Wall (Included) Gang box mount (Optional)
^ <b>Hardware</b>	
Indoor and Outdoor Use	Indoor only
Ambient Operating Temperature	0 to 40° C (32 to 104° F)
Ambient Operating Humidity	5 to 95% noncondensing
Networking Interface	(1) 10/100 Mbps RJ45 port
Connectivity	Ethernet
Power Method	PoE UL 294 Power-limited Class 2 PSU UL 60950-1/62368-1 LPS/PS2 PSU
Max. Power Consumption	5W
Supported Voltage Range	44—57V DC
Display	127 mm (5") diagonal
Touch Screen Technology	Capacitive multi-touch
Display Luminance	300 nits (Typical)
Screen Orientation	Portrait
Resolution	1280 x 720 px
Microphone	✓
Speaker	✓
Buttons	(1) Factory-reset
PoE Cabling Requirements	<p>Cat 5e cabling is the minimum performance category recommended. The performance category utilized should match the transmission speed required at the installation site.</p> <p>The minimal conductor gauge permitted to connect between the PSE or power injector and the PD shall be 26 AWG (0.13 mm<sup>2</sup> ) for patch cords; 24 AWG (0.21 mm<sup>2</sup> ) for horizontal or riser cable.</p>

UL 294 Statement	<p>Compliance with IEEE 802.3 specifications was not verified as part of UL 294.</p> <p>The equipment is intended to comply with the section of the National Electrical Code, ANSI/NFPA 70, Article 725.121, Power Sources for Class 2 and Class 3 Circuits.</p>
CAN/ULC-60839-11-1 Grade	Grade assignment: I
Certifications	CE, FCC, IC, UL 294, CAN/ULC-60839-11-1
Document number, and issue date and/or revision level	UA-Intercom-Viewer, V01
^ <b>Software</b>	
Management Application	Access
Software Information	The software version can be checked at <a href="https://unifi.ui.com">https://unifi.ui.com</a>

### Stay in Touch





[Terms of Service](#) | 
 [Privacy Policy](#) | 
 [Legal](#) | 
 [Cookies Settings](#)

© 2025 Ubiquiti, Inc. All rights reserved.